

 
 
# PROTECTOR LATCH INSTALLATION GUIDE

\*\*\* BEFORE YOU BEGIN, READ BELOW \*\*\*

## PARTS LIST:

- Durable Heavy-duty Plastic Magnetic Latch Keeper
- Easy-Lock gate latch body assembly w/2-sets of Keys
- Screw Pack, Total of 11-screws
  - (1) set screw for securing Bottom Housing to Lower Bracket #2.
- Upper Mounting Bracket #1
- Lower Mounting Brackets #2
- Installation & maintenance instruction sheet

Swimming pool fences, gates and latches cannot be substituted for adult supervision. If using this latch on a swimming pool gate, consult all appropriate local authorities for safety requirements.

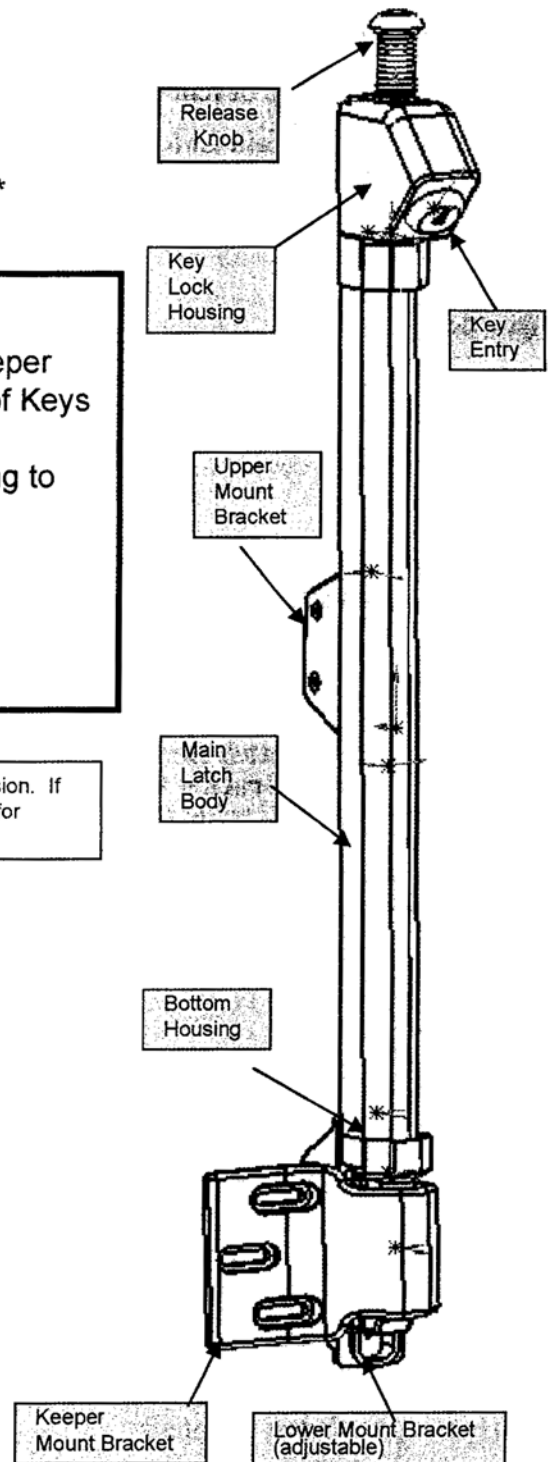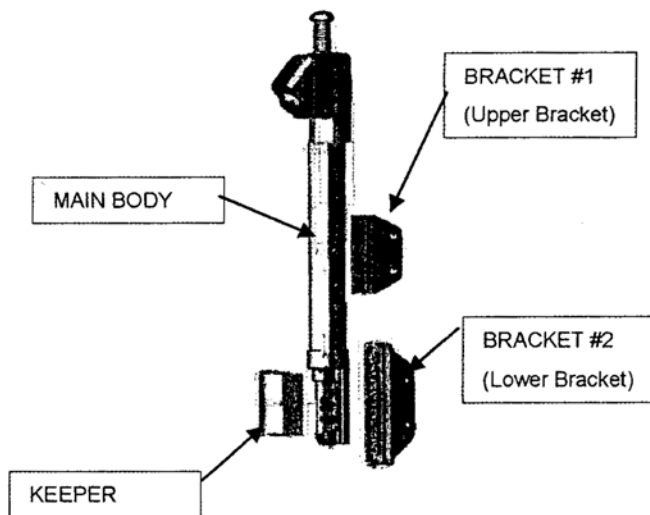

# The Protector

## Magnetic Gate Latch

**STEP-1** Establish heights, spacing and proper location for bracket installations.

**STEP-2** Install **Bracket #1** using 3 screws secure to fence post frame as shown in sketch. Attach near top of fence post.

**STEP-3** Take **Main Latch Body** and position so that you can slide the rear grooves down onto installed Bracket #1. (Use a measuring tape to make sure you are within measurement requirements.) (see Detail-A.)

**STEP-4** Hold Main Latch Body to maintain position as shown in **Detail -A**. Use a pencil to mark location of **Lower Bracket #2**. (HINT: place pencil mark in center hole of **Bottom Housing** to establish center location for **Lower Bracket #2** and location for **Keeper** to be installed on Gate.)

**STEP-5** Attach and secure **Lower Bracket #2** to fence at center mark using (4) screws.

**STEP-6** Now, slide **Main Latch Body** down onto **Upper Bracket #1** and down into **Lower Bracket #2**. Secure, by applying the set screw into **Bottom Housing** holes (use any that align) See Sketch-C.

**STEP-7** With gate closed, position **Keeper** and align with Main Latch Body. Secure **Keeper** with (3) screws to Gate.

**STEP-8** If any fine adjustments are needed, use Horizontal adjustment on **Keeper** and Vertical adjustment on **Bottom Housing** for better alignment.

